

Make sure you have the following:

Installation Software CD
Wireless G Plus MIMO USB Network Adapter
User Manual

System Requirements

PC-compatible laptop computer with one available USB port
CD-ROM drive
Windows® 2000 and XP

Quick Setup →

1. Install

Important Note:

Install the Software before Inserting the Adapter

- 1.1 Insert the Installation Software CD into your CD-ROM drive.



- 1.2 The Belkin Wireless Networking Utility setup screen will automatically appear (may take 15–20 seconds to appear).

- 1.3 Click "install" from the menu.

(Click)

Install

Note: If the Belkin Wireless Networking Utility setup screen does not appear within 20 seconds, access your CD-ROM: double-click on the "My Computer" icon and then double-click on the CD-ROM drive into which you have placed the installation CD. Double-click on the folder named "Files", then double-click on the icon named "setup.exe".



- 1.4 The InstallShield Wizard will now start. Click "Next" to continue.

(Click)

Next



- 1.5 You will now see the first of a series of progress screens to help you know where you are in the setup process. Click "Next" to continue.

(Click)


Next



- 1.6 When the installer is done installing the software, you will see the following screen. Click "Finish".

(Click)

Finish

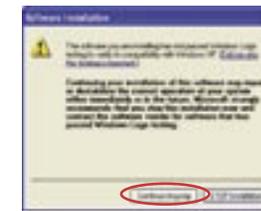

- 1.7 You might see a screen similar to this one. It DOES NOT mean there is a problem. Our software has been fully tested and is compatible with this operating system. Select "Continue Anyway" and follow the on-screen instructions.

(Click)

Continue Anyway


2. Connect

Plug the Adapter into an Available USB port on your Notebook Computer



- 2.1 After the software installation is finished, the message "Please plug in your USB Network Adapter now" will appear. Insert your Adapter.

Note: If your system did not prompt you to insert your Adapter after the installation is completed, please do so now.

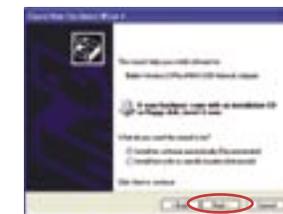

- 2.2 The Found New Hardware Wizard will appear. Select the "Install the software automatically (Recommended)" option and click "Next" to install the hardware.

(Click)

Next



2.3 Hardware installation is now complete. Click "Finish" to close the Wizard.

(Click)

Finish



3.3 The Belkin Wireless Networking Utility icon can also be found on the system tray.


Note: Double-clicking on the Belkin Wireless Networking Utility icon on the system tray will bring up the "Utility" screen.

3. Configure

Use the Belkin Wireless Networking Utility



3.1 Double-click the Belkin Wireless Networking Utility icon on the desktop screen.

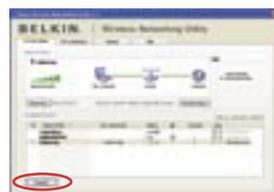

3.2 The Belkin Wireless Networking Utility screen will appear. Select a network to connect to from the "Available Networks" list and click "Connect".

(Click)

Connect

Note: In order to see your available networks, you must be near a working wireless router or access point.

Installation is now complete!

Need help? For further information regarding the installation of this product, please check your User Manual, visit www.belkin.com/networking, or call our free technical support.

Belkin Tech Support

USA: 877-736-5771
310-898-1100 ext. 2263

Europe: 00 800 223 55 460

Australia: 1800 235 546

New Zealand: 0800 235 546

Singapore: 800 616 1790

BELKIN®

www.belkin.com

Belkin Corporation
501 West Walnut Street,
Compton, CA 90220-5221
USA
+1 310 898 1100
+1 310 898 1111 fax

Belkin Ltd.
Express Business Park
Shipton Way, Rushden
NN10 6GL, United Kingdom
+44 (0) 1933 35 2000
+44 (0) 1933 31 2000 fax

Belkin B.V.
Boeing Avenue 333
1119 PH Schiphol-Rijk
The Netherlands
+31 (0) 20 654 7300
+31 (0) 20 654 7349 fax

Belkin GmbH
Hanebergstraße 2
80637 Munich
Germany
+49 (0) 89 143405 0
+49 (0) 89 143405 100 fax

Belkin SAS
5 Rue du Petit Robinson
3ème étage, 78350 Jouy en Josas
France
+33 (0) 1 34 58 14 00
+33 (0) 1 39 46 62 89 fax

Belkin Nordic
Knarrarnäsgatan 7
164 40 Kista
Sweden
+46 (0) 8 5229 1870
+46 (0) 8 5229 1874 fax

© 2006 Belkin Corporation. All rights reserved. All trade names are registered trademarks of respective manufacturers listed.