

## Firmware upgrades procedure:

1. Open the Internet Explorer web browser on the computer #1 and point it to the address
2. https://192.168.2.155 (example) Enter the user name, password and click on the 'login' button:
  - User name: 'admin'
  - Password: 'SMBremote'
3. Select "Firmware Upgrade" under "Maintenance" in the far left menu of the Web interface. The **Firmware Upgrade** page will appear.
4. Click  locate and install the firmware file.
5. Click "Start Upgrade".
6. Once the upgrade is complete, click Reboot. The unit should reboot. After about 60 seconds the Login page should appear. If not Power cycle the unit



7. Delete the previous version of the client: Close all instances of Internet Explorer. Open Internet Explorer and select Tools | Internet Options. On the General tab click Settings button in the Temporary Internet Files section. Click View Objects button. In the new window delete Itcclient object and close the window.