









Multi-Network Cable Tester User Manual



P73237

F4F314
F4F314-T





A. To Test Twisted Pair (Shielded or Unshielded) Modular Cables

1. Plug one end of the cable into the modular jack on the master unit marked with "▲" and the other end into the receiving modular jack on either the master unit or the remote terminator (for F4F314-T only).
2. As soon as power is turned on, select the scanning mode to either "AUTO" or "MANUAL". To do the "AUTO" test, just press down the scanning mode button to "AUTO" and the LED display will light up in sequence for each conductor and show the pin-configuration of the cable. To test the cable manually, just leave the scanning mode button up on "MANUAL" mode, and press the "TEST" button to see the continuity and pin-out of one particular wire in the cables. Refer to section "D" and "E" for further information.
3. For shielded cables the 9th LED marked with "G" indicates the grounding/shielding of the cable. If the cable is properly grounded/shielded, the "G" LEDs on both lines should light up, otherwise the cable is not grounded/shielded.

B. To Test Coax Cable (BNC)

1. Plug both ends of the cable into the female BNC connectors on the two RJ45/BNC adapter cables, thus changing the coax cable to a RJ45/RJ45 cable. Plug one end of the cable with the RJ45 connector into the modular jack on the master unit marked with "▲" and the other end to the receiving modular jack either on the master unit or the remote terminator (for F4F314-T only).
2. As soon as the power is turned on, select the scanning mode to "MANUAL" and then press the "TEST" button twice to see the first and second pair of LEDs which indicates the continuity of the cable tested. It is recommended to use "MANUAL" mode for coax cable since coax cable has only two conductors. Refer to section "E" for further information.

C. To do the Remote Test (F4F314-T only)

1. Plug the first end of the cable into the modular jack on the master unit marked with "▲" (plug the RJ45/BNC adapter on first for the coax cable testing), then plug the second end of the cable at the remote location into the modular jack on the remote terminator. Then repeat the instructions from section "A-2", except compare the LEDs on the remote terminator to the LEDs on the master unit. If the remote end of the cable is connected to a faceplate or patch panel, you will need to use the included RJ45/RJ45 or RJ45/BNC adapters to connect the cable to the remote terminator.

D. To Read the Test Results

1. Continuity:

□	■	□	□	□	□	□	□	□	□
1	2	3	4	5	6	7	8	G	
□	□	□	□	□	□	□	□	□	□

 Pin 2 is continued
2. Open:

□	■	□	□	□	□	□	□	□	□
1	2	3	4	5	6	7	8	G	
□	□	□	□	□	□	□	□	□	□

 Pin 2 is opened
3. Short:


□	■	■	□	□	□	□	□	□	□
1	2	3	4	5	6	7	8	G	
□	■	■	□	□	□	□	□	□	□

 Pin 2 and Pin 3 are shorted together
4. Miswire:



□	□	■	□	□	□	□	□	□	□
1	2	3	4	5	6	7	8	G	
□	□	□	□	□	■	□	□	□	□

 Pin 3 and Pin 6 are crossed


E. The Configuration of Pin-Out Indicator for RJ45, RJ11, and BNC Connectors

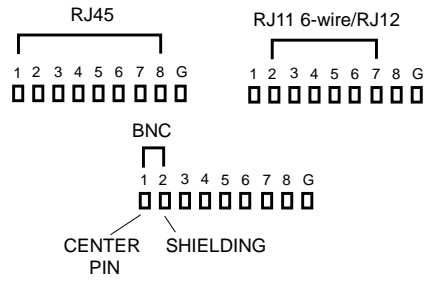

E. The Configuration of Pin-Out Indicator for RJ45, RJ11, and BNC Connectors (continued)

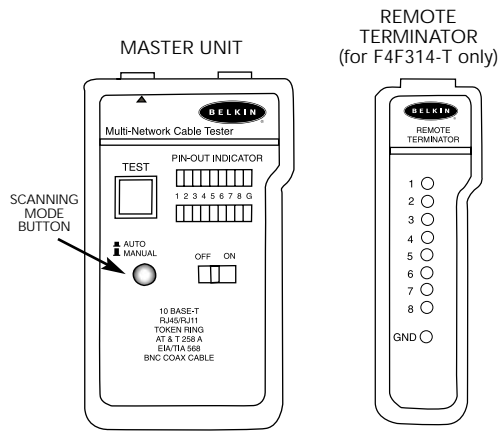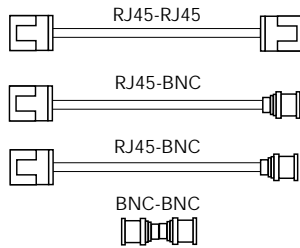

F. Pair Configurations For Cables with Modular Connectors

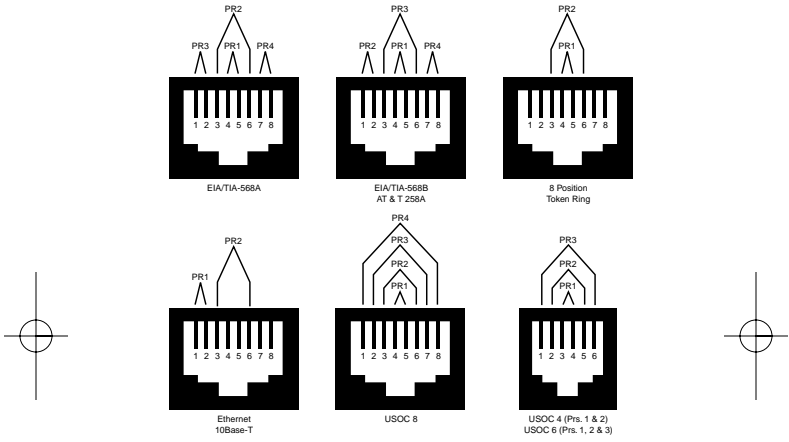



belkin.com

Belkin Components

501 West Walnut Street
Compton • CA • 90220 • USA
Tel: 310.898.1100
Fax: 310.898.1111

Belkin Components, Ltd.

Unit 13 • Gatelodge Close • Round Spinney
Northampton • Northants • NN3 8RX • UK
Tel: +44 (0) 1604678300
Fax: +44 (0) 1604678330

Belkin Components B.V.

Diamantlaan 8 • 2132 WV
Hoofddorp • The Netherlands
Tel: +31 (0) 235698765
Fax: +31 (0) 235612694

©1999 Belkin Components. All Rights Reserved. All Trade Names are
Registered Trademarks of Respective Manufacturers Listed.