



**Bulldog Universal Security Kit  
F8E500  
Installation Instructions**


1. Disconnect all electrical power to your equipment
2. Select a flat, solid area, avoiding ventilation holes, for the placement of each security plate. Clean the selected area with the cleaning wipes and let dry.
3. Apply the Bulldog strength glue to each security place and position on the desired object, continuing to hold in place for 30 seconds. Allow plates to dry for 24 hours.
4. Insert cable through each plate tunnel with large anchoring plate being last.
5. Finally, secure your system by attaching the padlock into the loophole cable ending.

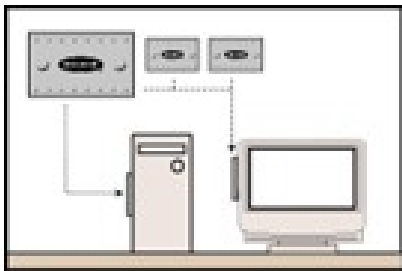

1-3

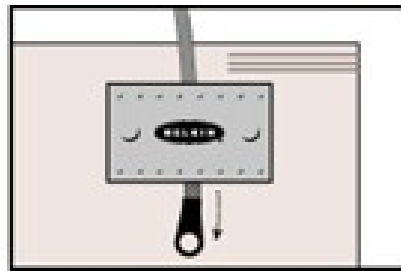

4

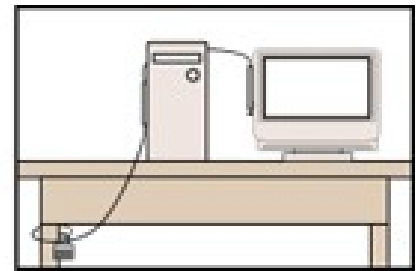

5